

iDFS CDMA Professional CDMA Software for Apple devices

iDFS Tool flash nTelos



Flash the iPhone 4\iPad 2 carrier nTelos is easy!




What do you need to have before flashing:

1. iPhone 4 CDMA or iPad 2 CDMA
2. Original Apple USB cable
3. **iTunes** installed
4. Device has to be **JailBroken**
5. **OpenSSH** and **Cydia** installed

Step 1

Enter your account details (e-mail and password) into iDFS and press «**Login**». Wait until your account data will be synchronized.

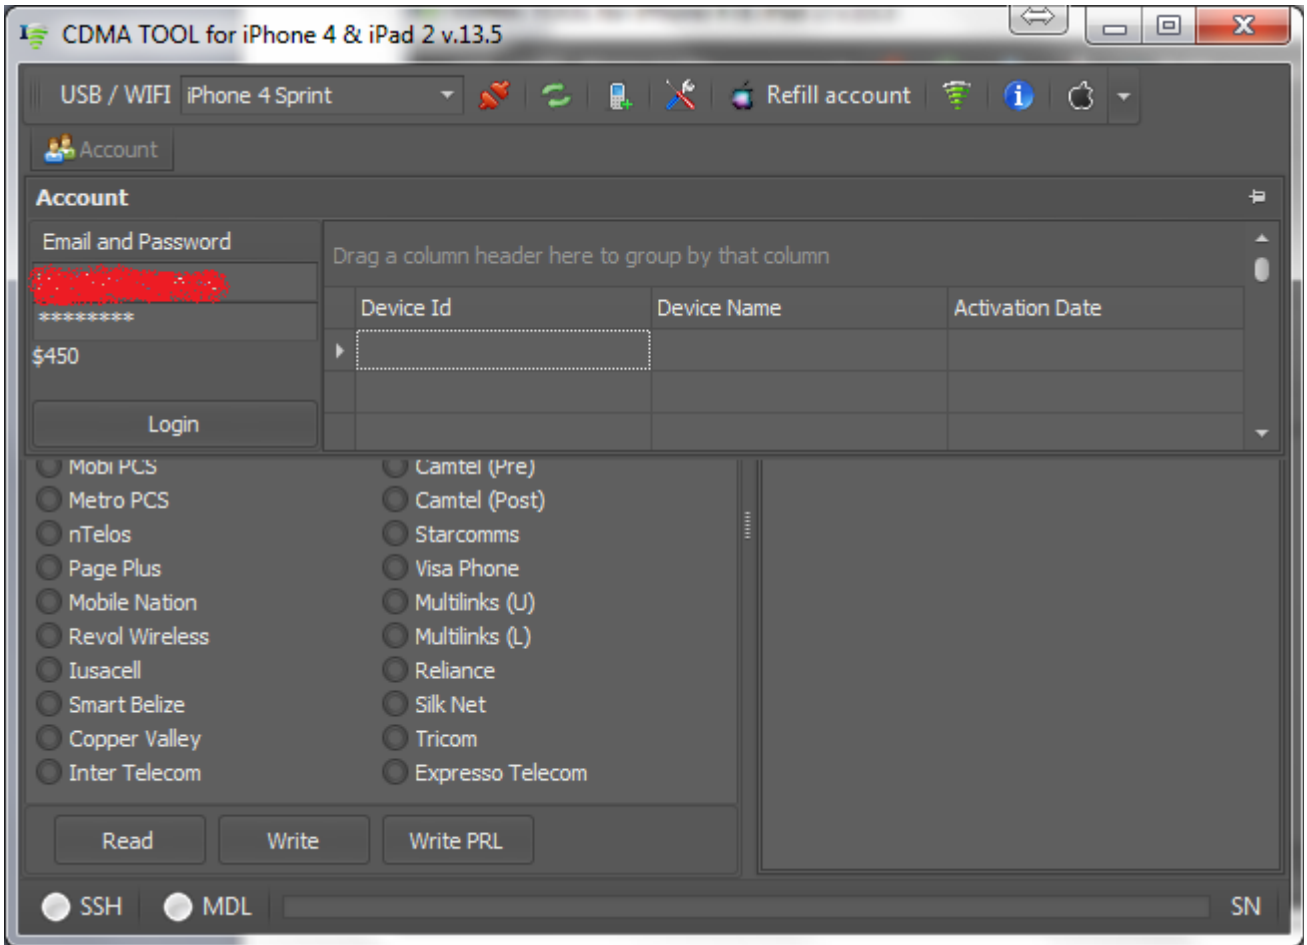


Step 2

Connect your device via USB. Device automatically will be recognized by iDFS.



To connect, click on the icon "Connect\Disconnect"

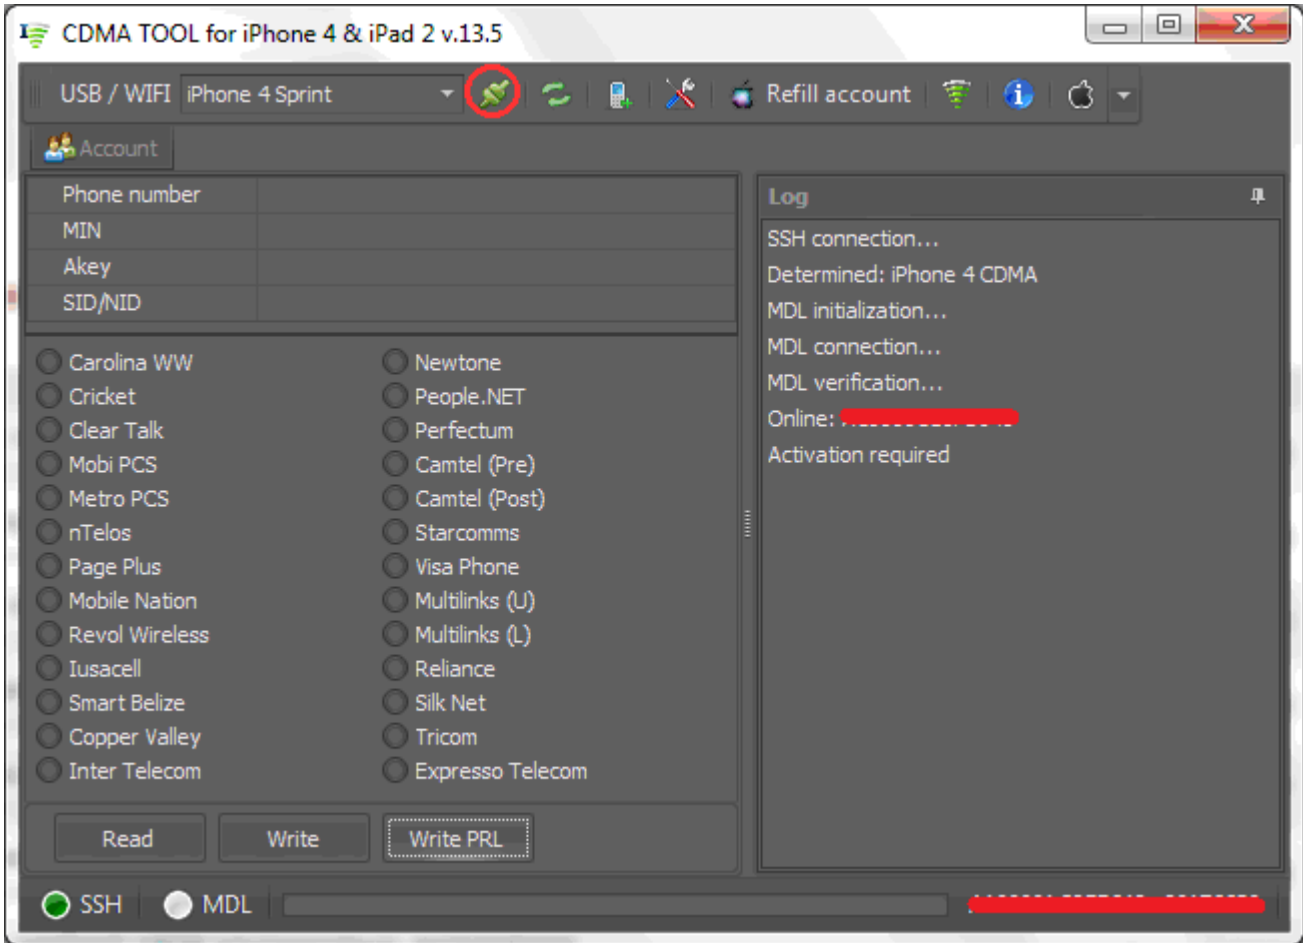


Activate your Apple MEID by pressing «**Activate**» button.




iDFS CDMA flashing nTelos Wireless

Confirm:

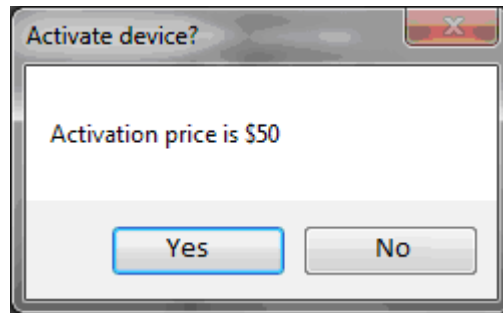


After activation iDFS will read and write all data from your device.

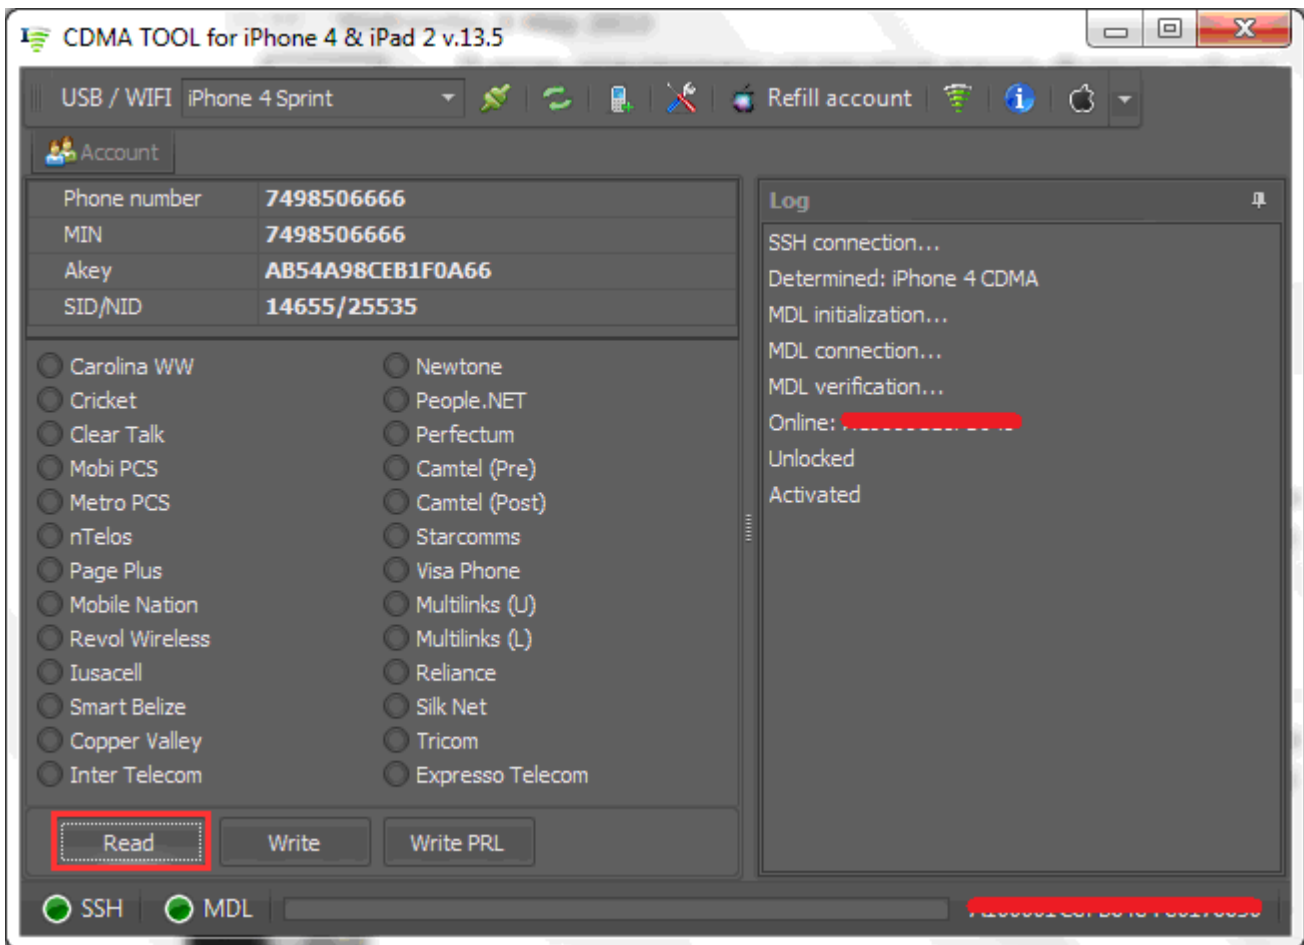

Step 3: Flashing nTelos Wireless

Flash PRL to nTelos Wireless

Click «Write PRL» and select your nTelos Wireless PRL:




PRL write: Ok

PRL write complete

Flash MIN\MDN to nTelos Wireless

Enter the required information: Phone number (MDN), MIN, Akey, SID\NID. Select destination carrier and click «Write»

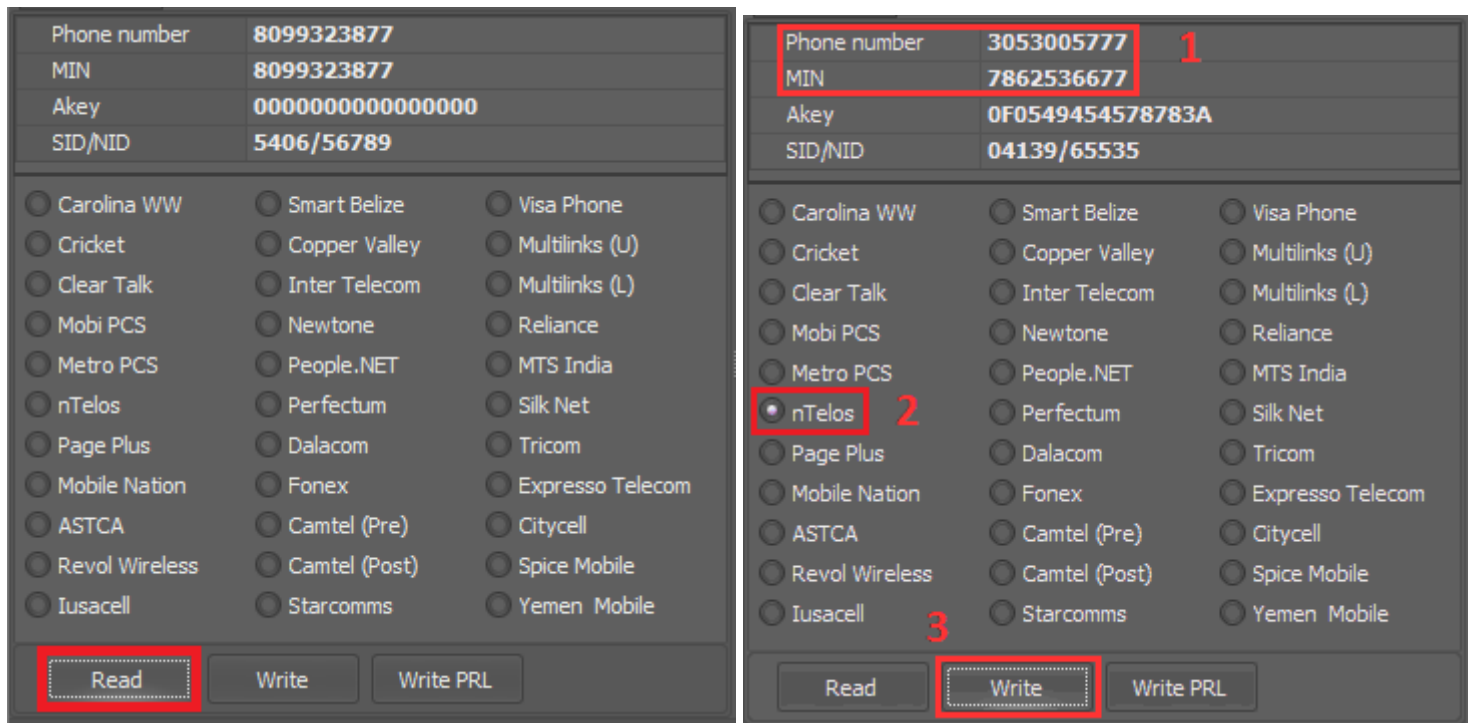

Status bar displays read/write progress:



All flashing DONE!

Follow the news:



Video manuals:



Official site www.cdmatool.com:

